

 


Trusted above all.™

VSF301 iVFD intelligent Video Flame Detector Safety and Technical Manual



Viking Integrated Safety



Read this manual prior to performing any task!



Viking Corporation
5150 Beltway Dr. SE
Caledonia MI 49316

Form No. F_020621 Rev 2

Ref: 2200.5009 Rev: 2.6 ECN:4610

HELP US TO HELP YOU

Every effort has been made to ensure the accuracy in the contents of our documents; however, Viking can assume no responsibility for any errors or omissions in our documents or their consequences. Viking would greatly appreciate being informed of any errors or omissions that may be found in our documents.

Please email Viking Technical Services at techsvcs@vikingcorp.com or call 1-877-354-5464. Please reference the Form No. and Rev shown in the upper right corner of this page.

THANK YOU

Contents

1	Introduction.....	5
1.1	Detector Features.....	5
1.2	Intelligent Visual Flame Detection.....	5
2	Safety Instructions	6
2.1	Warnings	6
2.2	Cautions	6
2.3	Important Safety Notices	6
2.4	EN 54-part 10 Limitation of use	8
3	Installation	9
3.1	Detector Enclosure	9
3.2	Mounting & Orientation	9
3.3	Wiring Procedure.....	11
3.4	0-20mA Output	12
3.5	Relay Mode	14
3.6	Installation Checklist.....	16
3.6.1	Mechanical	16
3.6.2	Electrical.....	17
4	System Design Guidelines.....	18
4.1	Earthing & Screening Requirements.....	18
4.2	Power Supply	18
4.3	RS485 Communications	18
4.4	HART Protocol.....	19
4.5	Cable Selection	19
4.6	DC Power.....	19
4.7	Video	20
4.8	RS485 Communication.....	20
5	Application Guidelines	21
5.1	Positioning Requirements.....	21

5.2	Detection Coverage	22
5.3	Exposure to Flare Radiation	22
5.4	Optical Contamination	22
5.5	Enclosed Areas	23
5.6	Detector Sensitivity	23
6	Maintenance and Commissioning	24
6.1	Procedure	24
6.2	Functional Testing	26
7	Fault Finding	27
7.1	Removal of the Electronics	27
7.2	Replacement of the Electronics	27
7.3	Diagnostics	27
7.4	LED Indication	28
7.5	Power Fault	29
7.6	Live Video Images	29
8	Technical Specification	30
8.1	Detector Information	30
8.2	Electrical Specification	30
8.3	Mechanical Specification	31
8.4	Environmental Specification	31
8.5	Certification and Approvals	32
8.6	Operating Specification	32
8.7	VSF301 Detector Ordering Information	33
8.8	Detector Accessories and Spares	33
9	Appendix A - Acronyms, Terms & Abbreviations	34
10	Appendix B - Field of View	35
11	Appendix C - IEC 61508 Failure Rate Data	37

1 Introduction

The Viking VSF301 is a combined flame detection and video surveillance system utilizing unique real time video-based flame detection technology developed by Viking. The intelligent visual flame detection algorithms can discriminate between genuine fire conditions and common false alarm stimuli.

1.1 Detector Features

Live Video

A live color video image is available from each detector; this allows information about the protected area to be displayed on a monitor in the control room, providing the operator with a visual feedback of an event, which can reduce response time.

Immunity and Discrimination

The detector is immune to common sources of unwanted alarms such as hot work (e.g., grinding and welding), hot CO₂ emissions (such as turbine exhausts) and reflected flare radiation.

Robust and Reliable

The detector has been designed to tolerate extreme environmental conditions experienced offshore or onshore.

Detection Coverage

The detector is sensitive to fires of n-heptane 1 ft² (0.1m²) at up to 144 ft (44m) within a 90° horizontal field of view.

Sensitivity

The sensitivity of the detector is preset and no changes in sensitivity are required.

Certified SIL 2 Capability

The detector has been certified IEC 61508 SIL 2.

1.2 Intelligent Visual Flame Detection

The detector operates 'standalone' or can be integrated within a FM Approved control system. Detectors are typically located throughout the installation to achieve specific detection coverage and ensure that site performance requirements are met.

Each detector can provide live video images and fire alarm/fault signaling to the control equipment.

Each detector incorporates within a single unit an imaging device, digital signal processing hardware, and firmware algorithms to process live video images and recognize flame features.

2 Safety Instructions

For the correct and effective use of this equipment, to maintain safety and avoid hazards it is essential that you read and understand these instructions fully and act accordingly BEFORE installing, operating, or maintaining the equipment.

PAY ATTENTION TO ALL SAFETY WARNINGS AND CAUTIONS

2.1 Warnings

This equipment is certified and intended for use in potentially hazardous areas. Install and use the equipment in accordance with the latest regulations.

For European (ATEX) installations IEC/EN60079-14 'Electrical Installations in Hazardous Areas' and IEC/EN 60079-17 'Inspection and Maintenance in Hazardous Areas' should be strictly observed.

For installations in North America the National Electrical Code (NEC) should be strictly observed. In other countries the appropriate local or national regulations should be observed.

The equipment must be properly earthed to protect against electrical shock and minimise electrical interference.

Do not drill holes in any housing or enclosure as this will invalidate the explosion protection. Ensure that the enclosure lid is fully tightened and locked into position before energising the equipment.

Do not open the enclosure in the presence of an explosive atmosphere.

All permits and proper site procedure and practices must be followed, and the equipment must be isolated from the power supply before opening the enclosure in the field.

Operators must be properly trained and aware of what actions to take in the event of a fire being detected.

Cable to be used for installation is to be selected with a temperature rating of greater than 77°F (25°C) above the maximum ambient temperature.

The metric cable entries are fitted with an internal stop. This will result in threads of the cable gland being visible. Do not over tighten.

2.2 Cautions

Use only approved parts and accessories with this equipment.

Do not attempt to replace the window as the lens and the front cover are individually matched pairs to meet the stringent requirement of the hazardous area certification.

The threaded portions of the detector are flame paths. These threads and the flame paths are not to be repaired.

To maintain safety standards, commissioning and regular maintenance should be performed by a qualified person.

2.3 Important Safety Notices

Pay attention to the guidelines given throughout this document. If in any doubt about the instructions listed within this manual, then please contact Viking.

Viking takes no responsibility for installation and/or use of its equipment if it is not in accordance with the appropriate issue and/or amendment of the manual. Viking reserve the right to change or revise the information contained herein without notice and without obligation to notify any person or organization of such action.

Only those parameters and configurations highlighted with the FM diamond () have been tested and approved by Factory Mutual.

Warning

Do not open the detector assembly in a hazardous area. The detector contains limited serviceable components and should only be opened by trained personnel.

Caution

The wiring procedures in this manual are intended to ensure functionality of the device under normal conditions. Due to the many variations in wiring codes and regulations, total compliance to these ordinances cannot be guaranteed. Be certain that all wiring complies with all local ordinances. If in doubt, consult the authority having jurisdiction before wiring the system. Installation must be done by trained personnel.

Caution

To prevent unwanted actuation or alarm, extinguishing devices must be inhibited/isolated prior to performance testing or maintenance.

Caution

SIL 2 capability is only confirmed for 0-20mA output configuration of the VSF301 visual flame detector.

Detector Orientation

Detectors should be mounted with the earth stud directly below the lens.

Detector Positioning

Detectors should be positioned to provide the best unobstructed view of the area to be protected. (see section 5.2 of this document)

The following factors should also be taken into consideration:

Identify all high-risk fire ignition sources. Ensure that enough detectors are used to adequately cover the hazardous area.

Locate and position the detector so that the fire hazard(s) are within both the field of view and detection range of the device.

For best performance, the detector should be mounted on a rigid surface in a low vibration area. (see section 5.1 of this document).

Extremely dense fog or blizzard conditions could eventually block the vision of the detector. (see section 5.4 of this document).

For indoor applications, if dense smoke is expected to accumulate at the onset of a fire, mount the detector on a side wall (approximately 1 meter, 3 feet) down from the ceiling.

The VSF3008 ITEST flame simulator can be used to verify correct detector positioning and coverage (see section 6.2 of this document).

The VSF301 has one sensitivity setting, this is factory set, and no changes can be made to set-up except by fully trained Viking engineers.

The detector carries out continuous internal hardware diagnostic testing to ensure correct operation is relayed to the control system. It can also be set to indicate dirty optics if this function is switched on. The detector should be subjected to a background light level of at least 1 LUX in every 16-hour period for 1 hour.

The diagnostic test interval – the maximum time taken to execute all diagnostics and act on a detected hardware fault (via 0-20mA output) is 500ms.

The VSF301 is not designed to annunciate diagnostic failures of signal returns via external wiring. Control systems and fire panels generally have fault monitoring for such an eventuality.

2.4 EN 54-part 10 Limitation of use

The VSF301 is not approved for use in Oxygen-enriched atmospheres.

As the VSF301 responds to visible flame the VSF301 cannot be used in locations where flare stacks are within its field of view without triggering alarms.

The VSF301 is unable to detect fires that are invisible to the naked eye, such as those using pure hydrogen, methanol, and sulphur as fuel.

The sensitivity of the VSF301 is reduced by obscurants such as smoke, fog, and other airborne particulates. The VSF301 may be blinded by extremely dense obscurants.

Arc welding should not take place within 3 feet (1 m) of the VSF301.


The “optical fault” must be disabled for applications where there is no light present e.g., cellar or chimney stack.

3 Installation

The VSF301 design has been developed to allow simple installation. The detector comprises two key components, the detector enclosure, and the detector internal assembly. The detector assembly located in the front of the enclosure should not be removed except by trained personnel. Unauthorised removal or disassembly of the detector assembly will invalidate the warranty. Only the rear end cap can be removed for terminal access.

3.1 Detector Enclosure

The detector electronics are housed in an enclosure certified for use in hazardous areas. For the exact certification and conditions of use see certification label on the device, or the example drawing below:

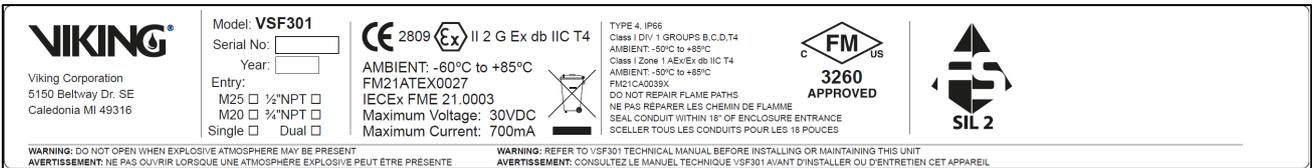

The detector comprises the front window cover including the window, the rear enclosure cover, the enclosure body, certification rating label (see above) and the mounting bracket.

The flame detector is supplied preassembled and includes the mounting bracket. However, it is not supplied with a mounting support and fixings, cabling, or glands.

3.2 Mounting & Orientation

The mounting bracket allows the detector's vertical orientation to be adjusted from 0 to 45° and allows a horizontal rotation of +/-45° when mounted from above.

Figure 1: Detector Mounting Bracket and Orientation

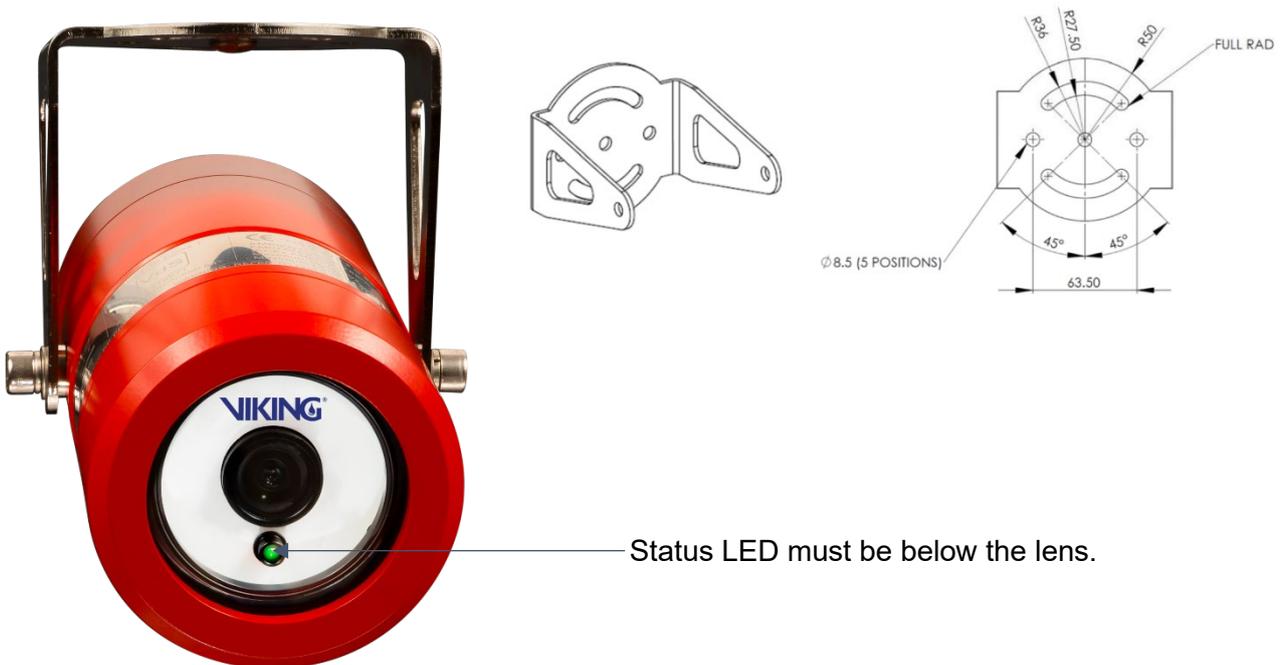


Figure 2: VSF301 Ceiling Mount


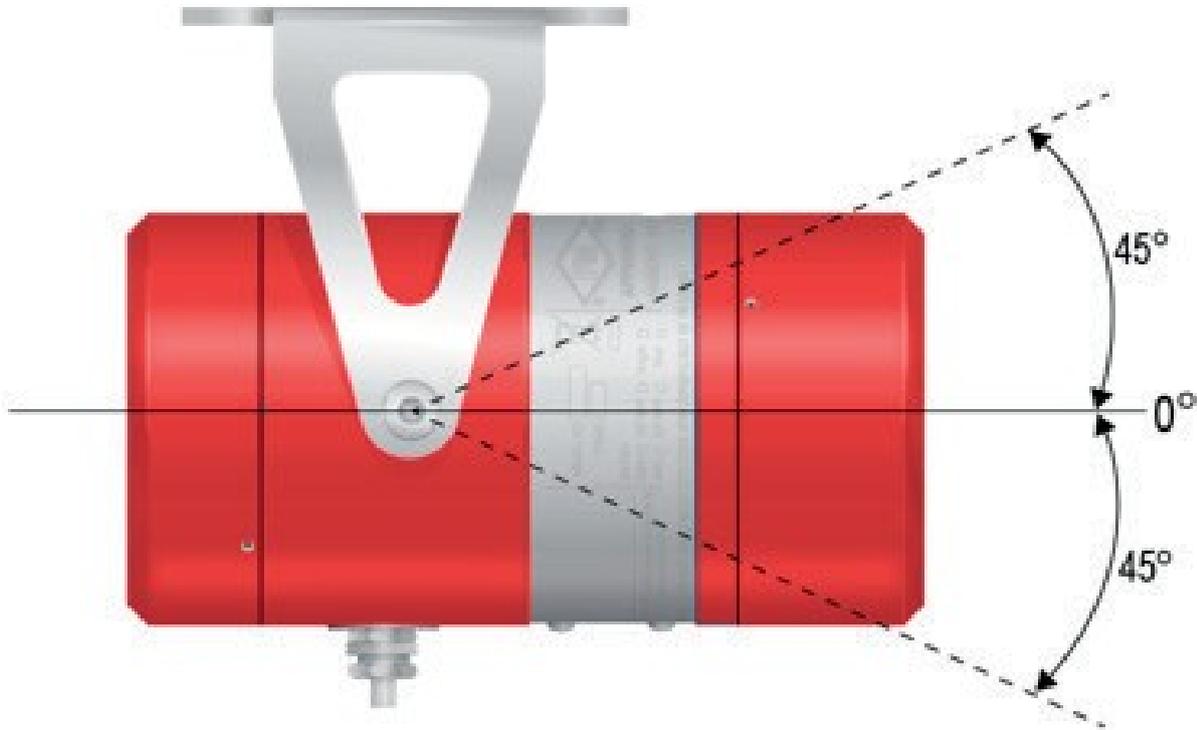


Figure 3: VSF301 Wall Mount

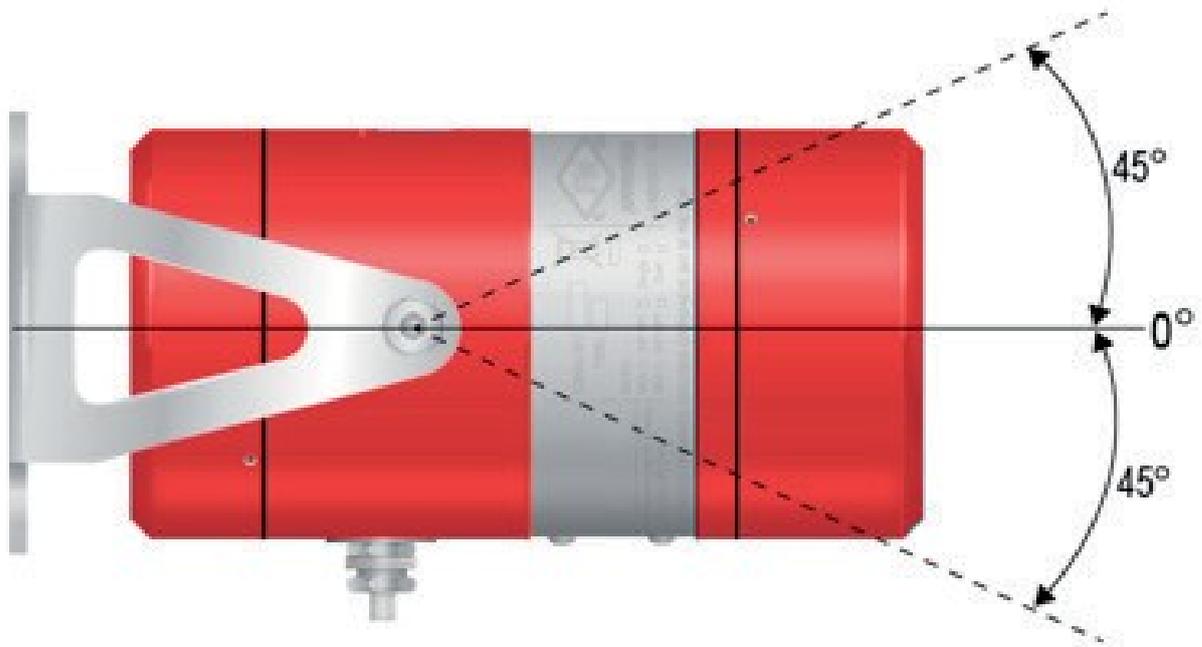

Firm, vibration free mountings are essential for trouble free operation of optical systems and the detector should be fixed to a rigid mounting. When mounting on a wall in this orientation allow for the cable gland and cable as this may restrict the downward rotation of the detector.


3.3 Wiring Procedure

The wiring terminals are in the rear section of the detector enclosure and are accessible by removal of the end cap.

The front section of the enclosure should only be accessed by trained personnel.

The terminal schematic detailed below shows the view looking inside the detector following removal of the end cap.

Figure 4: Terminal Schematic

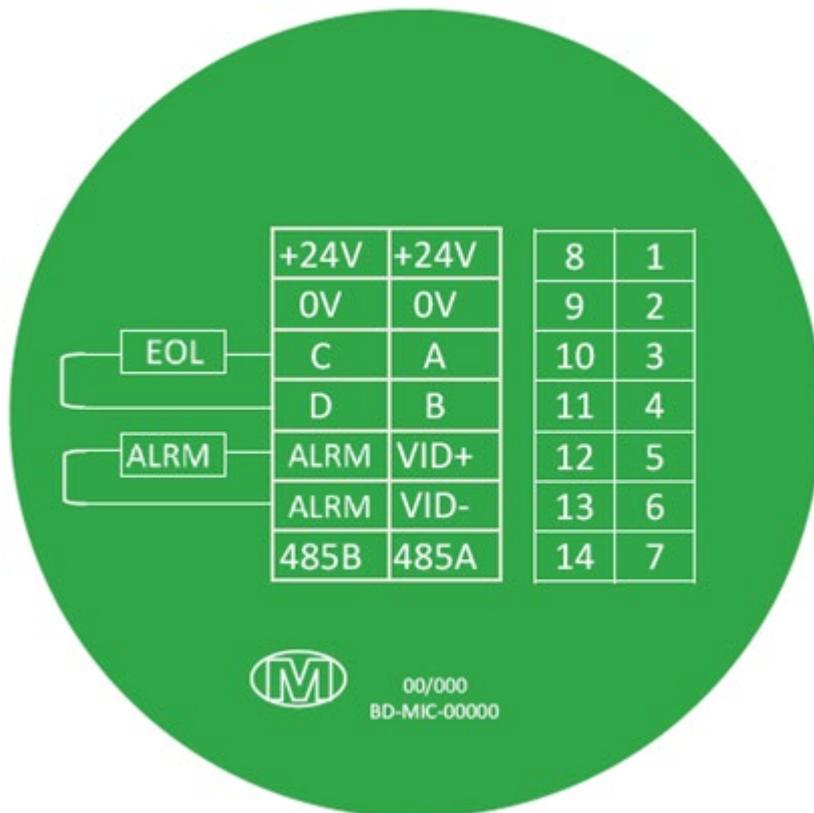

The detector has two types of alarm output available.

- 0-20mA (source, non-isolated)
- Relay (Alarm & Fault)

Listed below are wiring options dependent on the functional requirements of the detector.

Note: Information below describes how to access RS485 communication by reversing the polarity of the power when there is no dedicated RS485 pair, or the detector is in HART® mode. This operation will disable the signal return to the control system whilst enabled. Care should be taken after using this facility to return the detector to normal operation.

3.4 0-20mA Output

The following wiring connection diagram shows correct wiring of the detector when a 0-20mA output is required.

Figure 5: 3 Pair Termination

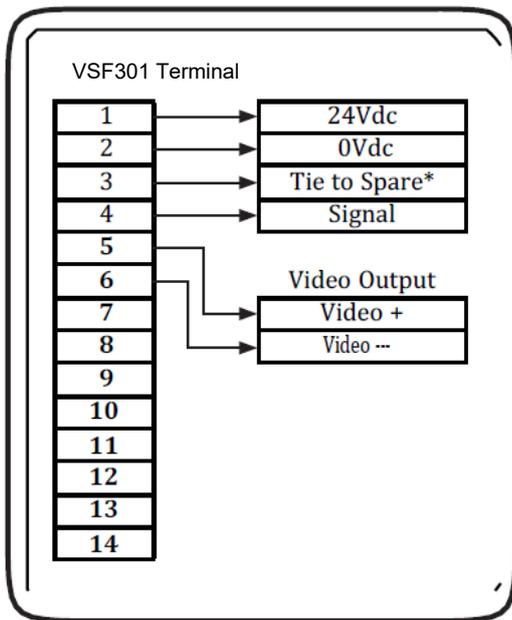


Figure 6: 2 Pair Termination

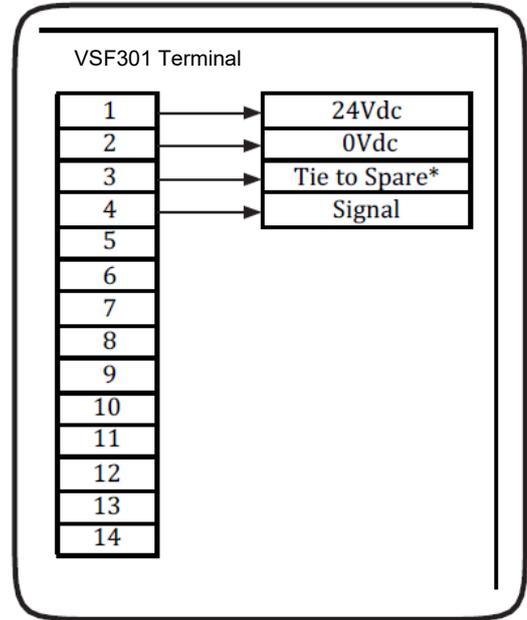


Figure 7: 3 Wire Termination


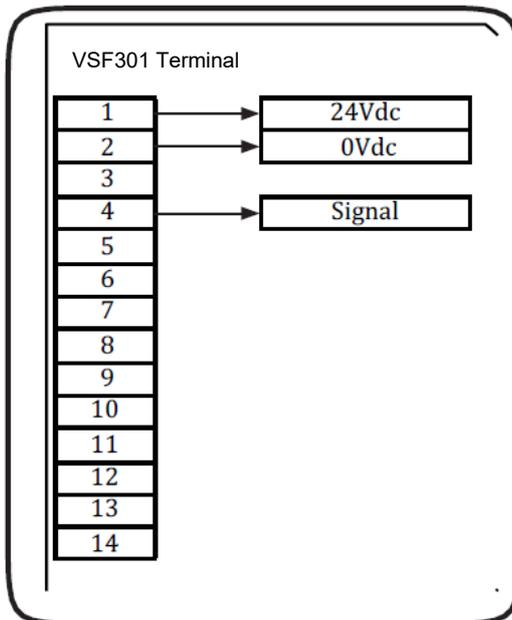


Figure 8: 4 Pair Termination

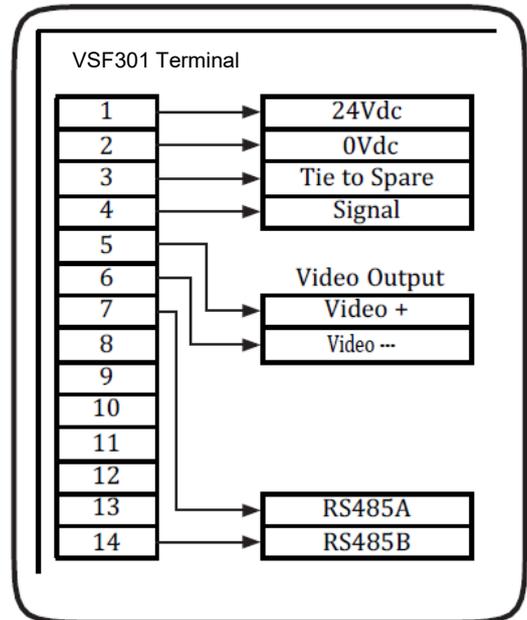

***Tied to spare terminal at control panel to allow RS485 communication with detector. Both HART® and RS485 cannot co-exist in a detector. When the power to the detector is reversed RS485 is enabled in this configuration.**

Information for wiring in the 0-20mA mode listed in figures 5 to 8 on previous page:

3 Pair Termination

Fully functional detector with continuous video and 0-20mA alarm output with HART®. Reversal of polarity across terminals 1 & 2 will enable Viking RS485 communication.

2 Pair Termination

0-20mA output only with reversal of polarity across terminals 1 & 2 enabling Viking RS485 communication.

3 Wire Termination

Application where only 3 wires are available. HART® communication is available in this configuration.

4 Pair Termination

Fully functional detector with continuous video, 0-20mA alarm output and connected Viking RS485 communication.

Viking RS485 communication should only be accessed by trained personnel.

Table 1: Current Level Output Indicators – Default Factory Values

Current Output	Event
< 1.0mA	Power/Detector Fault
1.0mA to 3.0mA	Optical Fault
4.0mA to 7.0mA	Healthy
16.0mA to 19.5mA	Alarm
>19.5mA	Fault (Over-range)


Alarm Relay

A further feature of the VSF301 flame detector when configured in 0-20mA mode is that an alarm relay is available if required. The alarm relay contact closes on alarm and can be employed by connecting to terminals 3 and 13 of the device.

RS485

It is highly recommended to always connect terminals 3 and 4 back to equipment room marshalling cabinet with the use of a twisted pair cable. This allows access to the RS485 from the safe area.

Figure 9: 3 Pair Termination with Relay

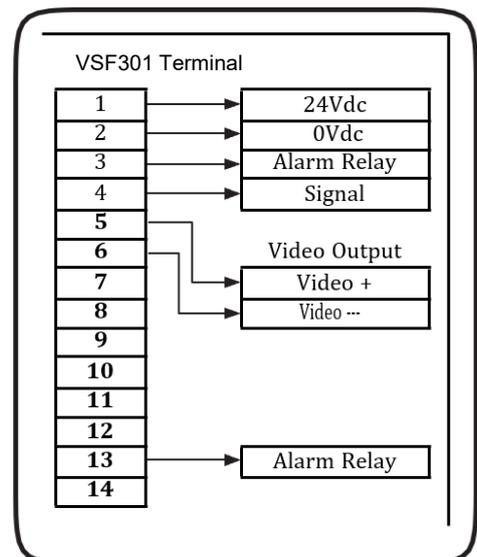

3.5 Relay Mode

The following wiring connection diagrams show options for wiring the detector when configured in relay mode.

Figure 10: 3 Pair Termination

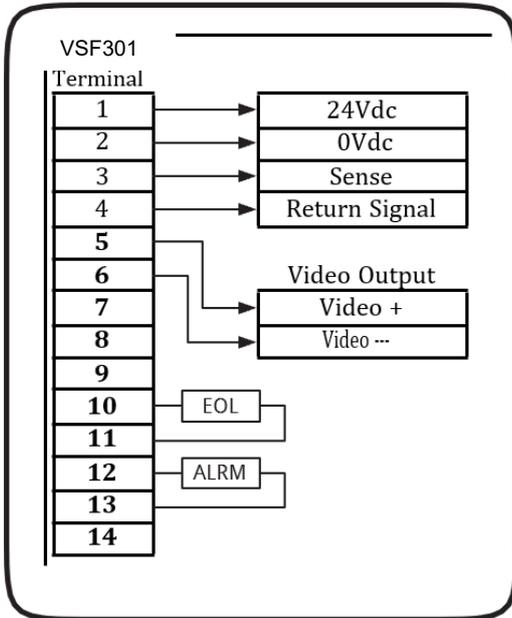


Figure 11: 2 Pair Termination


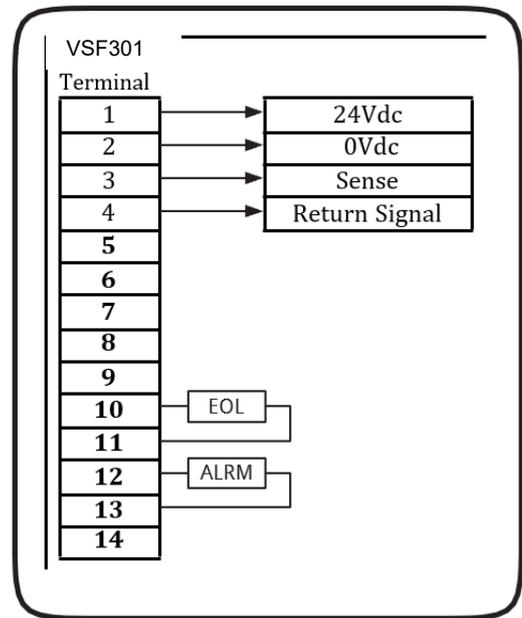


Figure 12: 4 Pair Termination

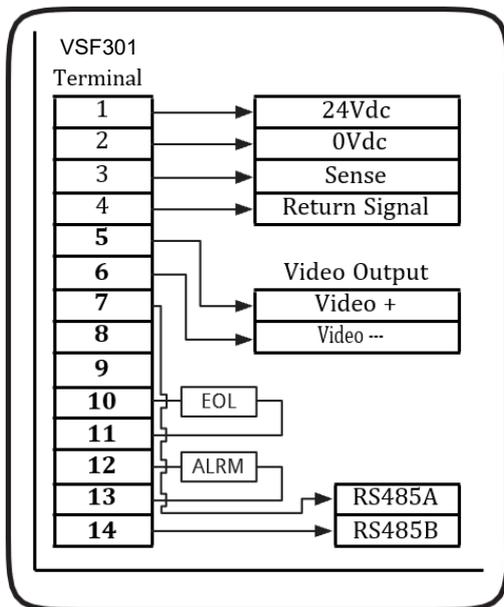

Information for wiring in relay mode listed in figures 10 to 12 on previous page:

3 Pair Termination

Fully functional detector providing continuous video as well as alarm and fault relays. Reversal of polarity across terminals 1 & 2 will enable Viking RS485 communication.

2 Pair Termination

Alarm and Fault relay only with reversal of polarity across terminals 1 & 2 enabling Viking RS485 communication.

4 Pair Termination

Fully functional detector with continuous video, alarm, and fault relays as well as permanent Viking RS485 communication connections.

Viking RS485 communication should only be accessed by trained personnel.

EOL and Alarm resistor values defined by the client and the control system which the detectors are being integrated into.

3.6 Installation Checklist

Experience has shown that poor installation and commissioning practice may result in an unreliable fire detection system that fails to meet the site performance targets. Before installing the detector, it is important to consider where it is to be located and how it is to be mounted. To maintain compliance with the EMC regulations it is essential the electrical installation be engineered correctly.

3.6.1 Mechanical

Notes	
	<p>When locating the detector consideration should be given to maintenance access to the detector. The detector mounting should be secure and vibration free.</p> <p>It is advisable to check the detection locations, prior to fabrication of the mounting supports, as changes are frequently made during construction at site which can affect detector coverage.</p> <p>The installation should allow space for subsequent detector removal, for maintenance or repair, to be easily achieved.</p>
1	<p>The detector should be fixed to a stable supporting structure using the mounting bracket provided. The supporting structure must allow for horizontal adjustment of the detector orientation. The support structure should be in place prior to detector installation. Information on mounting is available from Viking.</p>
2	<p>The threaded flame path of the enclosure cover and body must be protected from damage during installation. Any such damage can destroy the validity of the enclosure.</p>
3	<p>The detector electronics shall be protected from mechanical damage and external sources of EMI such as X-rays, RFI and electrostatic discharge. The detector should not face directly towards the sun.</p>
4	<p>Fit the mounting bracket to the support structure using 5/16-inch (8 mm) bolts (not provided). The detector (bracket) should be oriented to provide the desired coverage.</p>
5	<p>The detector enclosure body should be fitted to the mounting bracket. The bolts locate into the bracket. Twist the enclosure to locate the bolts; these are then tightened using a 6mm Allen key.</p>
6	<p>Ensure the detector is orientated such that the earthing stud is directly beneath the lens.</p>
7	<p>Glanding should be carried out by trained personnel. The gland should be fitted in line with installation standards for potentially explosive atmospheres that is 5 full threads minimum with the IP seal washer fitted at the bottom of the thread. This sealing arrangement will result in several threads of the cable gland being visible. The gland should be torqued between 11 to 15 lb. ft (15 to 20 N m).</p> <p>Note – The IP seal washer only applies to metric threads.</p>

3.6.2 Electrical

Notes	
	It is advisable to check the detection locations, prior to fabrication of the mounting supports, as changes are frequently made during construction at site. Detector cabling must be segregated from cables carrying high-speed data or high energy and/or high frequency signals and other forms electrical interference. The detector requires a clear unobstructed view of the local hazard. To avoid local obstructions, such as pipework and cable trays, a 6 ft (2 m) helix should be allowed in the detector cabling. The detector should only be fitted just prior to commissioning the detector. Experience shows that the detector can be damaged due to cable testing operations (Insulation Tests, etc.).
1	Isolate all associated power supplies. Ensure that they remain OFF until required for commissioning.
2	The threaded flame path of the enclosure cover and body must be protected from damage during installation. Any such damage can destroy the validity of the enclosure.
3	The electronics subassembly shall be protected from mechanical damage and external sources of EMI such as X-rays, RFI and electrostatic discharge.
4	The enclosures external earth stud should be connected to a local earth point.
5	Remove the transit plug(s) from the enclosure body gland entries.
6	Fit approved cable glands.
7	Prepare the cable tails. The cable screens should be cut back to the crotch at the detector and insulated from contact with the enclosure or any other local earth. The twist in each pair should be maintained to within 1" (25mm) of the termination. Cable tails should be 8" (200mm) long.
8	Where plastic junction boxes are used the cable screens (shield) should be maintained to within 1" (25mm) of the termination and fully insulated.
9	Where unscreened cables are used for panel wiring, then all cables must be suitably twisted into pairs and video cables should be segregated from other signal sources.
10	All cable screens (shield) should be connected to the local clean earth at the control panel. The screens and twisted pairs should be maintained to within 1" (25.4mm) of the terminations.

4 System Design Guidelines

The following guidelines are intended to assist with the electrical design and engineering of systems where it is intended that flame detectors will be used.

4.1 Earthing & Screening Requirements

It is important to ensure that the system is correctly connected to earth. Incorrect or poor earthing can adversely affect system operation and may result in poor video image quality.

The detector enclosure is to be connected to a local earth and the detector cable screens (shields) should be cut back to the crotch and not terminated within the detector. If the detector enclosure cannot be connected to a local earth, then care should be taken to ensure the cable armor braid provides a suitable earth or that the enclosure earth stud (external) is separately connected to a suitable earth point using a single core 12 AWG (4mm²) earth cable.

All detector cable screens should be connected to the local clean earth at the control panel. The screens (and twisted pairs) should be maintained to within 1" (25.4mm) of the terminations at the detector, within all junction boxes and at the control panel. Where unscreened cables are used for panel wiring, then all cables must be suitably twisted into pairs and video cables should be segregated from other signal sources.

4.2 Power Supply

The detector requires an absolute minimum supply voltage of 18Vdc, as measured at the detector terminals. The system power supply voltage and power distribution should be arranged such that on the longest cable run the detector(s) has a supply voltage of greater than 18Vdc.

4.3 RS485 Communications

RS485 communications can be accessed either directly via the detector specific terminals, or as previously stated, via terminals A&B (3&4) whilst the power supply polarity is reversed. Using Viking Simple Apps software, the RS485 channel can be used to view and/or modify detector firmware, version, configuration or download recorded alarm video from SD card. Contact Viking for Simple Apps software.

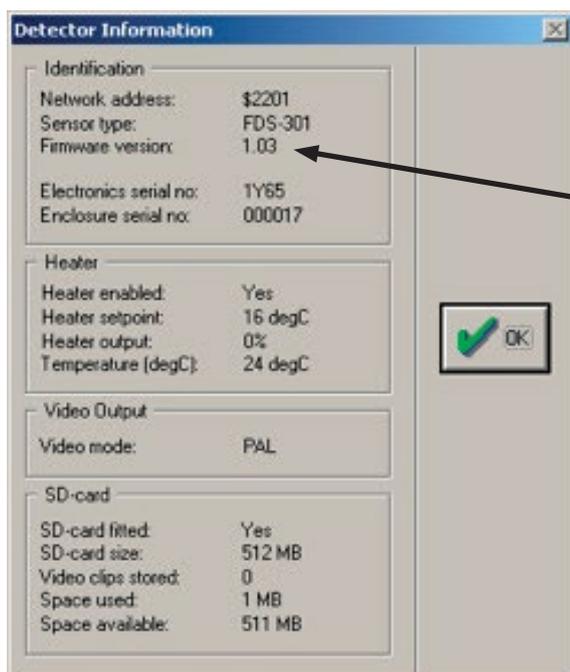


Figure 13: VSF301 Information

Firmware version

4.4 HART Protocol

Consult factory for further information regarding HART protocol.

4.5 Cable Selection

Cable to be used for installation is to be selected with a temperature rating of greater than 77° Fahrenheit (25° Celsius) above the maximum ambient temperature.

The metric cable entries are fitted with an internal stop. This internal stop has an IP washer mounted directly above it. Ensure this is fitted to maintain the ingress protection. This will result in threads of the cable gland being visible. Do not over tighten.

The installation and local regulations and standards determine the overall cable specification. This section specifies suitable cable characteristics to ensure correct operation of the flame detector.

There are several different wiring methods available, as detailed in 3.4 and 3.5 of this manual.

4.6 DC Power

NOTE: Table 2 shows an absolute maximum for cable length; try not to approach this value.

DO NOT ground any cable shields at the detector housing.

Table 2: Maximum Cable Lengths (24Vdc supply)

Installation based on 24V nominal supply	Number of Flame Detectors	Maximum Power (W)	Maximum Cable Length (m) with 1.5mm ² Conductors (12Ω/km)	Maximum Cable Length (m) with 2.5mm ² Conductors (7.6Ω/km)
Detector - Heater off	1	6W	1000	1578
Detector - Heater on	1	15W	480	800

Table 3: AWG Conversions

Cross Sectional Area (mm ²)	American Wire Gauge (AWG)	Typical Conductor Resistance per km (3280 ft.) DC Ω/km @ 20°C (Approx.)
0.5	22	36
1.0	18	19
1.5	16	12
2.5	14	7.6

The overall performance and the transmission distance depend on the selected twisted pair cable. Individually screened twisted pairs offer better electrical immunity.

It is not necessary for the DC power cable to be a twisted pair or individually screened, a 2-core stranded cable with an overall screen is sufficient. The minimum conductor size is determined by the cable length, the number of Flame Detectors on each loop and the maximum allowed voltage drop at the last detector.

To prevent RS485 and Video common mode problems this is limited to a maximum of four volts (4V) on the negative supply (0V).

4.7 Video

The video cabling should be a twisted pair stranded cable with an overall screen. Where multi-core cables are used then individual screened twisted pairs are recommended. The cable should have the following characteristics:

Table 4: Video Cable Characteristics

Cable Characteristic	Characteristic Impedance	Capacitance	Conductor Resistance	Attenuation @ 1 MHz	Inductance
Nominal	150R	50nF/Km	--	--	--
Absolute Limit	90R to 150R	100nF/Km	150R	6dB	7mH/Km

The maximum cable length is dependent on the cable manufacturer's attenuation specification, which is approximately proportional to conductor size.

The characteristic impedance of a transmission line is a function of the physical dimensions of the conductor and the permittivity of the dielectric (the insulation), at high frequencies this is approximately equivalent to:

$$z_0(\lambda) = \sqrt{L/c}$$

L	= Cable Inductance (mH)
C	= Cable Capacitance (μF)
Zo	= Characteristic Impedance (Ohms)

Equation 1: Characteristic Impedance Calculation

For maximum performance, the video output of the VSF301 is designed for differential twisted pair operation. For single ended output, a Viking VTP4 or differential to single ended balun should be used.

4.8 RS485 Communication

The RS485 communications cabling should be a twisted pair stranded cable with an overall screen. Where multi-core cables are used then individual screened twisted pairs are recommended. The cable should have the following characteristics:

Table 5: RS485 Cable Characteristics

Cable Characteristic	Characteristic Impedance	Capacitance	Conductor Resistance	Attenuation @ 1 MHz	Inductance
Nominal	120R	50nF/Km	--	--	--
Absolute Limit	90R to 120R	100nF/Km	120R	6dB	7mH/Km

The maximum cable length is dependent on the cable manufacturers' attenuation specification, which is approximately proportional to conductor size. The characteristic impedance of a transmission line is the same as for the video above.

5 Application Guidelines

In considering the application of the detector it is important to know of any conditions that may prevent the detector from responding. The detector provides reliable response to visible flames within its field of view, and insensitivity to common false alarm sources. Solid obstructions or a direct view of intense light sources may result in a reduction in the coverage and/or a reduction in the detector sensitivity. Scaffolding or tarpaulins in the detector's field of view may reduce coverage. Contamination of the detector window may result in a reduction in sensitivity.

The detector provides a live colour video image for surveillance of the protected area. As with conventional video cameras the detector should not face directly towards the sun or a brightly lit scene. In such conditions the detectors automatic exposure control would darken the image to avoid overexposure; the resulting picture may be too dark for surveillance purposes. In the case of an offshore vessel or platform, the detector should ideally be placed facing inwards towards the plant and with minimal view of the horizon.

The detector has a horizontal field of view of 90° and a vertical field of view of 65°. The location and orientation of the detector in relation to the protected area determines the actual footprint. Achieving the desired coverage depends on congestion within the protected space, the location of the detector(s) and the distance of the detector from the hazard. It may be necessary to install more than one detector within an area to achieve adequate coverage.

The detector sensitivity, expressed as fire size at a distance, is determined visually by the apparent size of the fire. This is a function of the fuel source, how it is released and distance from the detector to the fire. The detector response time is relatively independent of fuel type and/or distance.

In common with other forms of flame detection the detector's sensitivity is reduced and potentially blinded by dense obscurants such as smoke, fog, and other airborne particulates. The detector is insensitive to arc welding; however, this should not be conducted within 3 ft (1m) of the detector.

5.1 Positioning Requirements

The following guidelines have been based on operational feedback, reflecting commonly experienced problems which can be traced to a failure to observe the following:


- Ensure the mounting position is free from vibration or movement.
- Prevent accidental knocking or forcing out of alignment.
- To ensure the best possible video image the detector should be facing away from the sun.
- Isolate as far as possible from local electrical interference sources.
- Ensure sufficient detection to achieve adequate coverage for all likely hazards.
- Minimize exposure to contamination of the detector face plate.
- Ensure ease of maintenance access to detector (i.e., direct, ladder or scaffold access).
- The detector should be aimed downward by at least 10° to 20°.

All these issues are of crucial importance to a successful installation, and they should be afforded great attention during the detailed design, construction, and commissioning phases of the work.

5.2 Detection Coverage

Detector locations can be chosen from computer models or from site surveys. The detectors should be aligned to view the intended hazard considering any obstruction and congestion. Software analysis of the actual detector coverage may be required to ensure adequate coverage of the hazards. This analysis can also be used to optimize the number of detectors and the loop configuration.

Figure 14 – VSF301 Coverage and Field of View

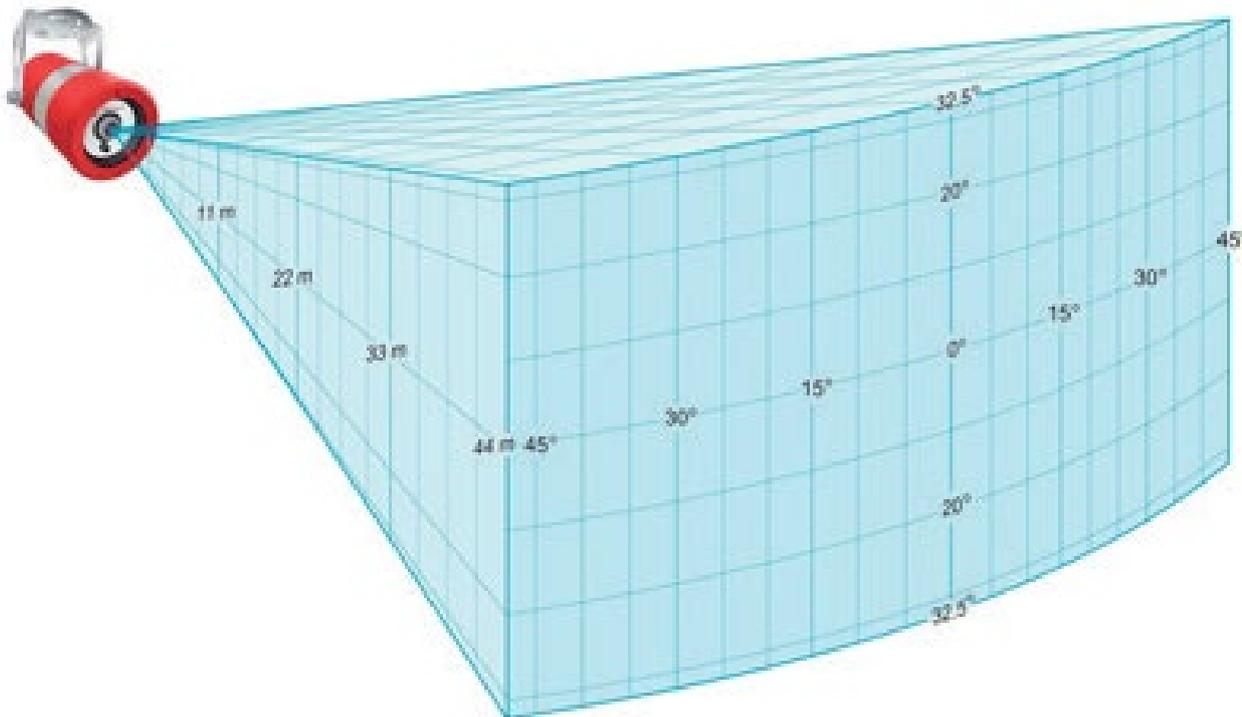

5.3 Exposure to Flare Radiation

Flame detectors are frequently used where hydrocarbon fire hazards are expected; these are quite often processing plants where a flare stack is in use nearby. The detector shall not have a direct view of the flare.

5.4 Optical Contamination

There are many sources of contamination such as oil, water (deluge water, rain, and sea-spray), snow, ice, and internal misting. Excessive contamination of the detector faceplate may result in an increased maintenance requirement and potentially reduce the detector's sensitivity. Where detectors are mounted at low level, care should be taken to avoid contamination (such as water and oil) from equipment above the detector. Care should be taken in sighting the detector to minimize the likelihood of such contamination. The detector is designed such that an optical fault is generated when half of the detection range remains. This is indicated by the fault output and is evident by the yellow colour of the LED on the face of the detector. The optical fault condition indicates that the detector requires cleaning or service. The optical fault indication is self-clearing.

5.5 Enclosed Areas

In enclosed areas, if dense smoke is expected to accumulate at the onset of the fire, the detector should be mounted 3 to 6 feet (1 to 2 metres) below the ceiling level.

5.6 Detector Sensitivity

The detector's response to a fire is a function of the fuel source and how it is released, fire size and distance, orientation to the detector and local ambient conditions. The typical figures are based on in-house tests except when marked with the FM logo, these tests were conducted and certified by Factory Mutual. As with all tests the results must be interpreted according to the individual application considering all possible variables.

The detector sensitivity to different fuel sources is dependent on the radiant heat output of the flame and the detectors typical response is shown below (see table 5).

Table 5: Typical VSF301 Response Characteristics

Fuel	Fire Size	Distance	FM
Methane fire	3 ft plume height (0.9m)	100 feet (30m)	
Ethanol fire	1ft ² pan (0.1m ²)	85 feet (25m)	
Diesel fire	1ft ² pan (0.1m ²)	130 feet (40m)	
Crude Oil (heavy fuel oil) Fire	2.7ft ² pan (0.25m ²)	130 feet (40m)	
Wax inhibitor (clear 10) fire	1ft ² pan (0.1m ²)	130 feet (40m)	
Anti-foam (Surflo AF-300) fire	1ft ² pan (0.1m ²)	130 feet (40m)	
Wood stack fire	1ft ² pan (0.1m ²)	130 feet (40m)	
N-heptane fire	1ft ² pan (0.1m ²)	144 feet (44m)	
N-heptane fire in direct sunlight	1ft ² pan (0.1m ²)	144 feet (44m)	
N-heptane fire in modulated sunlight	1ft ² pan (0.1m ²)	144 feet (44m)	
N-heptane fire in the presence of modulated black body radiation	1ft ² pan (0.1m ²)	144 feet (44m)	
N-heptane fire in the presence of arc welding	1ft ² pan (0.1m ²)	144 feet (44m)	
N-heptane fire in the presence of a 1000-watt lamp	1ft ² pan (0.1m ²)	144 feet (44m)	
Gasoline fire	1ft ² pan (0.1m ²)	144 feet (44m)	
JP4 fire	3.8ft ² pan (0.36m ²)	200 feet (61m)	
Silane fire	2 ft plume height (0.6m)	42 feet (13m)	

6 Maintenance and Commissioning

6.1 Procedure

This maintenance schedule/ commissioning procedure is intended for guidance only. The actual level of maintenance required will depend on the severity of the operating environment and the likelihood of damage or the rate of contamination from oil, sea spray, deluge system etc. It is advisable to regularly review maintenance reports and adapt the maintenance period to the operating environment.

Cautions:

Use only approved parts and accessories with this equipment.

Do not attempt to replace the window as the glass and the front cover are individually matched pairs to meet the stringent requirement of the Hazardous area certification. The threaded portions of the detector are flame paths. These threads and the flame paths around the window are not to be repaired.

To maintain safety standards, commissioning and regular maintenance should be performed by a qualified person.

Table 6: VSF301 Maintenance and Commissioning Procedure

Step	Periodic Inspection and Maintenance	Suggested Interval
1 - 6	General Inspection and maintenance of the detector and faceplate.	6 Monthly
6 - 14	Specific inspection and maintenance of the detector enclosure.	12 Monthly
16	Detector function testing.	6 Monthly
1 - 5 15 - 17	Commissioning Procedure.	Post Installation
Step	Activity	Key Points
1	Detectors that require maintenance / commissioning should be taken offline and inhibited. Detectors which require to be opened will need to be isolated electrically.	Ensure that panel wiring, and terminations associated with all units under test are in good order.
2	Ensure that the detector mounting arrangements are secure and undamaged.	
3	Ensure that the detector enclosure is intact and undamaged.	
4	Ensure that all associated cables and glands are correctly made up, secure and undamaged.	
5	Clean the enclosure faceplate (outside) with a mild detergent solution and a soft cloth until the window is clear of all contamination. Wash the window thoroughly with clean water and dry with a clean lint free cloth or tissue.	Assess requirement for opening the enclosure, for maintenance or cleaning, follow steps 6 to 14.
6	Open the detector enclosure if required, by removing the enclosure cover. This exposes the enclosure flame path and detector lens.	Avoid damage to the flame path, faceplate, and lens.
7	Clean the enclosure cover and body flame paths with a dry clean cloth to remove and contamination. If the flame path or threads are badly pitted the components should be replaced.	
8	Check the 'O' ring seal on the enclosure cover is not damaged or perished, replace as required. Note the ingress protection is compromised if the seal is not correct.	
9	Clean the enclosure faceplate (inside) with a mild detergent solution and a soft cloth until the window is clear of all contamination. Wash the window thoroughly with clean water and dry with a clean lint free cloth or tissue.	
10	Non-setting waterproof grease should be evenly applied to the flame path on both the enclosure cover and body.	
11	Clean the detector lens. This should be done with a soft, dry, and clean cloth.	Avoid touching the optics or electronics.
12	Clean the detector enclosure faceplate. Use a degreasing agent on the outside to remove deposits.	
13	The enclosure cover must be screwed on to a minimum of 5 full turns or until fully tight and secured using the locking screw provided.	
14	Reinstate the detector back into service.	
15	Ensure that inhibits are applied, then, using the flame test torch, function test the detector. Note the detector LED indicator, within the detector housing, changes colour to RED.	Check the complete display system for correct function and indication.
16	Isolate the power to the detector and ensure a fault is initiated within the control system. Check the Ma output is indicating 0mA.	
17	De-isolate the detector and ensure the status LED indicates green. Reinstate the detector back into service.	

6.2 Functional Testing

The detector can be function tested using the VSF3008 ITEST Flame Simulator, which has been specifically designed to provide a convenient means of field testing the detector. Refer to the VSF3008 ITEST Flame Simulator user manual for instructions on its use.

In the unlikely event of the detector failing to respond to the VSF3008 ITEST Flame Simulator please contact Viking technical support. Please ensure that the flame detector and flame simulator are being used correctly in the first instance by referring to their manuals.



7 Fault Finding

7.1 Removal of the Electronics

Warning there are no user replaceable parts within the electronic module. Any attempt to repair or dismantle the electronic sub-assemblies will void the warranty. If any fault is suspected within the electronics module the module is to be returned to Viking for investigation and repair if required. Any faults should be reported to Viking as per the instruction in section 6.2.

Removal of the electronics should only be performed by competent personnel. The following is the procedure for removal of the electronic module: -

1. Loosen the Allen screw that secures the lens cap to the housing.
2. Un-screw the lens cap assembly and remove.
3. Gently un-screw the three screws indicated until they freely turn. Please note these screws are not removable.
4. Grasp the two screws positioned at the bottom of the detector and pull the electronics module out of its housing.

7.2 Replacement of the Electronics

The following is the procedure for installation of the electronic module: -

1. Insert the electronic module with the LED positioned at the bottom of the housing.
2. Rotate the module clockwise and anti-clockwise until the locating pins click into position.
3. Push the electronic assembly into the housing until the face plate is flush with the front of the housing. Note: This should take minimum force if the locating pins are in position.
4. Gently screw the three screws indicated on the label in until they bottom into their counter sinks Note: Do not over tighten.
5. Grease and replace the lens cap.
6. Tighten the lens cap Allen locking screw.

7.3 Diagnostics

It is impossible to provide fault diagnostics for every possible detector fault. In all cases it is advised that the following best practice is followed:

1. Only make one change at a time (changing more than one thing makes diagnosis very difficult).
2. Check the most obvious possible cause first.
3. Work systematically through the problem.
4. Keep good notes on the original problem, each step taken, and the results observed.

7.4 LED Indication

The detector LED indicator is used to reveal the detectors current state, as shown below:

Figure 15: VSF301 Fascia - Status LED




Table 7: LED Status Diagnostic Chart

LED Colour	Status	Indicator
Green	Healthy	
Flashing LED – Yellow/Green	24V/0V Polarity Reversed	
Steady OFF	No Power/Major Internal Fault	
Steady Yellow	Fault	
Red	Alarm	

7.5 Power Fault

If the detector LED indicator is OFF or flashing then there may be a power supply fault, as shown below:

Figure 16: Power Supply Diagnostic Chart

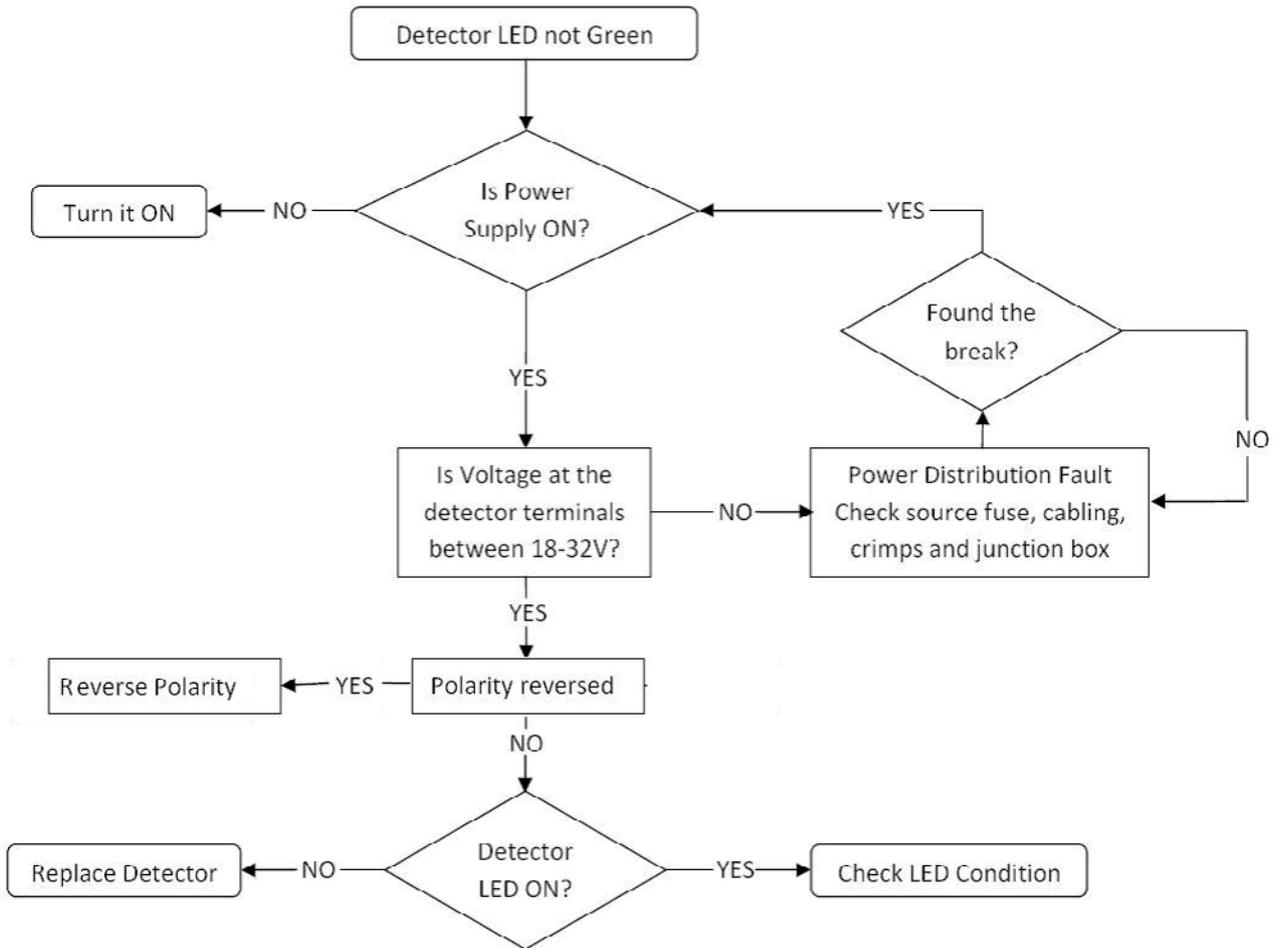

When investigating power supply faults, it is important to check that all voltages are within the detectors operating range (18V to 32V) under full load conditions as the voltages measured under no load conditions can be misleading.

7.6 Live Video Images

Poor quality video is often a result of earth differentials, induced noise and/or inadequate screening. These issues require attention if video quality is a priority. Poor quality video does not affect the functionality of the VSF301 detector. Video can be verified from the detector using a portable viewing unit connected to the video output terminals. If there is video directly from the VSF301 then the control system must be examined for failures.

8 Technical Specification

8.1 Detector Information

Parameter	Value
Model	Viking VSF301
Type	Intelligent Visual Flame Detector – iVFD
Design Principle	Flame detection algorithm linked to near IR video feed
Spectral Range	0.75 to 1.0 μ m

8.2 Electrical Specification

Parameter	Units	Min	Max	Comment
Power Supply				
Supply Voltage outside Canada	Vdc	18	32	Inc. ripple
Supply Voltage inside Canada	Vdc	18	30	Inc. ripple
Supply Ripple	Vpk-pk	--	1.0	
Detector Power Consumption no heaters	W	--	6	
Detector Power Consumption with heaters	W	6	15	
Detector shutdown voltage (low supply)	Vdc		<18	
RS485 Transceiver – Meets EIA-485 Standard Specification				
Line Termination Resistor	R	--	120	
Driver Differential Output Voltage	V	1.5	--	Typical 2.0
Driver Fan Out	Unit Loads	--	255	
Receiver Input Resistance	R	96K	--	
Receiver Unit Load		--	1/8	
Video Driver (Twisted Pair)				
Line Termination Resistor	R	--	150	Recommended
Driver Output Impedance	R	--	150	
Driver Output Voltage				
Terminated	Vpk-pk	1.8	2.3	Typical 2.1
Un-terminated	Vpk-pk	3.6	4.6	Typical 4.2

8.3 Mechanical Specification

Parameter	Units	Value	Comment
Enclosure			
Overall Dimensions	inches	4 Diameter x 8 Length	
Overall Dimensions	mm	100 Diameter x 200 Length	
Shipping Weight	lbs.	5.5	13.2
Shipping Weight	Kg	2.5	6
Material		HE30 Aluminum	316SS
Coating	Color	Red Powder Coated Finish	
Cable Entries	mm/inches	Dual M25, Dual ¾ NPT	Other variants on request
Terminal Wire Size	mm ² / AWG	2.5 / 14	
Ingress Protection		NEMA 4X (IP66)	
Mounting Bracket		See figure 1 Mounting Bracket Page 9	
Support Fixings	mm	2 x M8	
Vertical Adjustment	Degrees	0 to 45	
Horizontal Adjustment	Degrees	0	Provided by support
Axial (horizontal) Rotation	Degrees	+/- 45	

8.4 Environmental Specification

Parameter	Units	Min	Max	Comment
Operating Ambient Temperature	°F/°C	-76 / -60	+185 / +85	T4
Operating Ambient Temperature	°F/°C	-58 / -50	+185 / +85	USA & Canada
Storage Ambient Temperature	°F/°C	-76 / -60	+185 / +85	
Relative Humidity	%RH	5	95	Non-condensing

8.5 Certification and Approvals

Parameter	Authority/ Standard	Approval	Certificate*
Hazardous Area Certification	ATEX	Ex II 2 G Ex db II C T4Gb IP66	FM21ATEX0027
Hazardous Area Certification	NEC 505	Class 1 Zone 1 A Ex db IIC T4	PR460215
Hazardous Area Certification	NEC 500	Class 1 Div 1, Groups B, C, D T4	PR460215
Hazardous Area Certification	IECEX	Ex II 2 G Ex db II C T4Gb IP66	IECEX FME 21.0003
American Fire Service Listing	FM	Class 3260, 3615, 3600, 3810	PR460215
CE Marked (Emissions)	Element	EN61000-6-3:2007A1:2011	9762TC2
CE Marked (Immunity)	FM	EN50130-4 2011 A1:2014	9762TC2
IEC 61508	exida	Certified SIL 2 Capable	VIK 2104078 C001
Canadian Certification	CSA C22.1	Class 1 Zone 1 A Ex db IIC T4	FM21CA0039X
Canadian Certification	CSA C22.1	Class 1 Div 1, Groups B, C, D T4	FM21CA0039X

8.6 Operating Specification

Parameter	Units	Min	Max	Comment
Detector Range (depth of field)	Feet / Meters	6.5 / 2.0	144 / 44	
Horizontal Field of View	Degrees	90	90	
Vertical Field of View	Degrees	65	65	
Detector Response Time	Seconds	4.0	30	
Power on reset delay	Seconds	5	30	
Parameter	Value			
Detector sensitivity	Spatial sensitivity - one range 0.1m ² N-Heptane fire at 144 ft/ 44m (per FM3260)			
Alarm Setting	Non-latching with automatic reset after 15 seconds (default) OR latched until the power is removed from detector.			
Advanced Optical Verification	Yes – no mirror continuous automatic optical verification			
Heated Optics	Yes – microprocessor controlled			
LED Status	Tri-state LED – Green HEALTHY; Amber FAULT; Red ALARM			
Output Options	Relay contacts - alarm and fault OR			
Output Options	0-20mA, HART® and 1 x Alarm Relay			
Video Output	Colour, VGA, 640x480 pixels, NTSC, or PAL			
Relay Rating	2 Relay Contacts – Alarm and Fault. DPDT, 2A @ 30Vdc			
Communication/ Configuration	RS485 and HART®			

8.7 VSF301 Detector Ordering Information

Viking Model	Viking Suffix	Part Number	Weight (lbs.)
VSF301 IVFD-V	-NPT-2	24368	5.5
VSF301 IVFD-V	-M25-2	24369	5.5
VSF301 IVFD-V	-NPT-SST-2	24370	13.2
VSF301 IVFD-V	-M25-SST-2	24371	13.2
VSF301 IVFD-V	-NPT-1	24596	5.5
VSF301 IVFD-V	-NPT-SST-1	24593	13.2

Note – additional cable entry variants are available upon request.

8.8 Detector Accessories and Spares


Parameter	Part Number	Weight (lbs.)
VSF3008 ITEST	24376	5.5
VTP4 Twisted Pair to Coaxial Converter	24387	0.4
BNC Converter	24388	0.4
VIM4 Quad Channel Video Isolator	24389	0.4
Vertical to Horizontal Mounting Adapter	24377	2.2
Standard Bracket 316 Stainless Steel (Spare only)	24378	2.2
Marine Bracket 316 Stainless Steel (not fitted)	24379	4.4
Detector Sealing Kit - Metric	24380	0.1
Flame Simulator Charger (spare)	24382	0.4
Sunshield	24383	1.1
2" pole mount kit	24384	5.5
3" pole mount kit	24385	5.5
4" pole mount kit	24386	5.5
USB to RS485 Converter	24591	0.3
USB HART Modem	24592	0.3

9 Appendix A - Acronyms, Terms & Abbreviations


Term	Description
AC	Alternating Current
ATEX	Atmosphere Explosive
AWG	American Wire Gauge
BS	British Standard
CCTV	Closed Circuit Television
CE	European Conformity
CO ₂	Carbon Dioxide
CSA	Canadian Standards Associated
dB	Decibel
DC	Direct Current
EMC	Electromagnetic Compatibility
EN	European Norm
FM	Factory Mutual
FOV	Field of View
HFT	Hardware Fault Tolerance
I or A	Electrical Current or Ampere
JB	Junction Box
Km	Kilometer
kW	Kilo Watt
LED	Light Emitting Diode
mH	Milli Henry – Inductance
MOR	Meteorological Optical Range
NEC	National Electrical Codes
nF, pF	Nano Farad, Pico Farad – Capacitance
PC	Personal Computer (IBM PC Compatible)
R or Ω	Ohms (electrical resistance)
SFF	Safe Failure Fraction
SIL	Safety Integrity Level
V	Voltage
Vs	Versus
W	Watts (Wattage)

10 Appendix B - Field of View


Horizontal field of view to a 1 ft² (0.1 m²) N-heptane pan fire with an alarm response time of less than 10 seconds. 100%=144 ft (44 m)

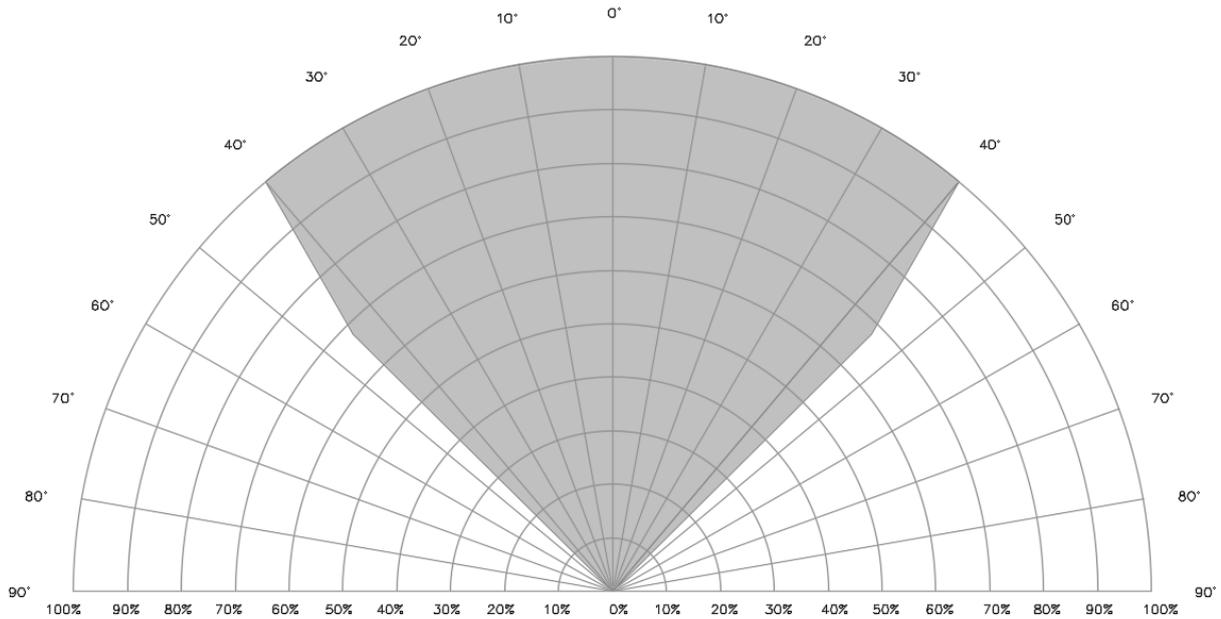


Horizontal field of view to a 1 ft² (0.1 m²) N-heptane pan fire with an alarm response time of less than 30 seconds 100%=144 ft (44 m)

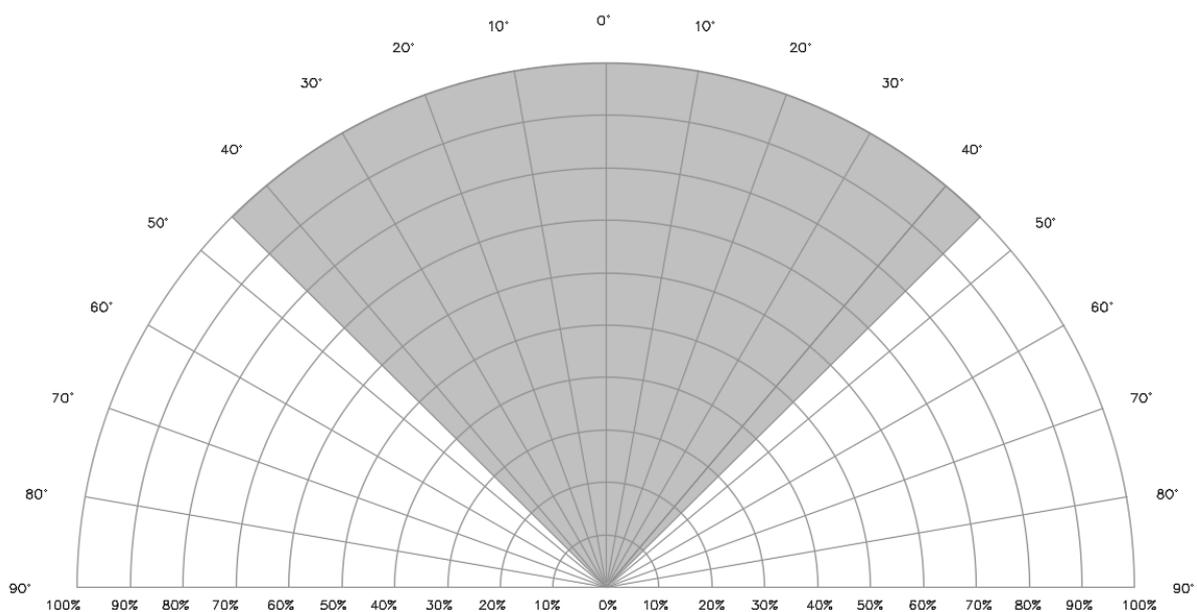

Vertical field of view to a 1 ft² (0.1 m²) N-heptane pan fire with an alarm response time of less than 10 seconds 100%=144 ft (44 m)

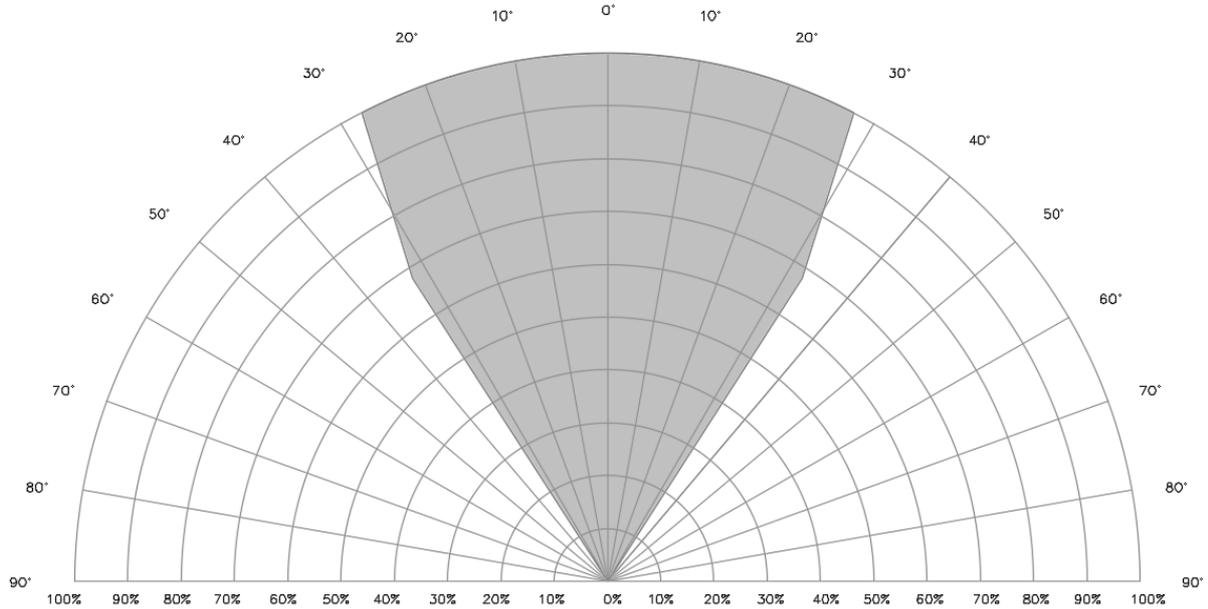

Vertical field of view to a 1 ft² (0.1 m²) N-heptane pan fire with an alarm response time of less than 30 seconds 100%=144 ft (44 m)

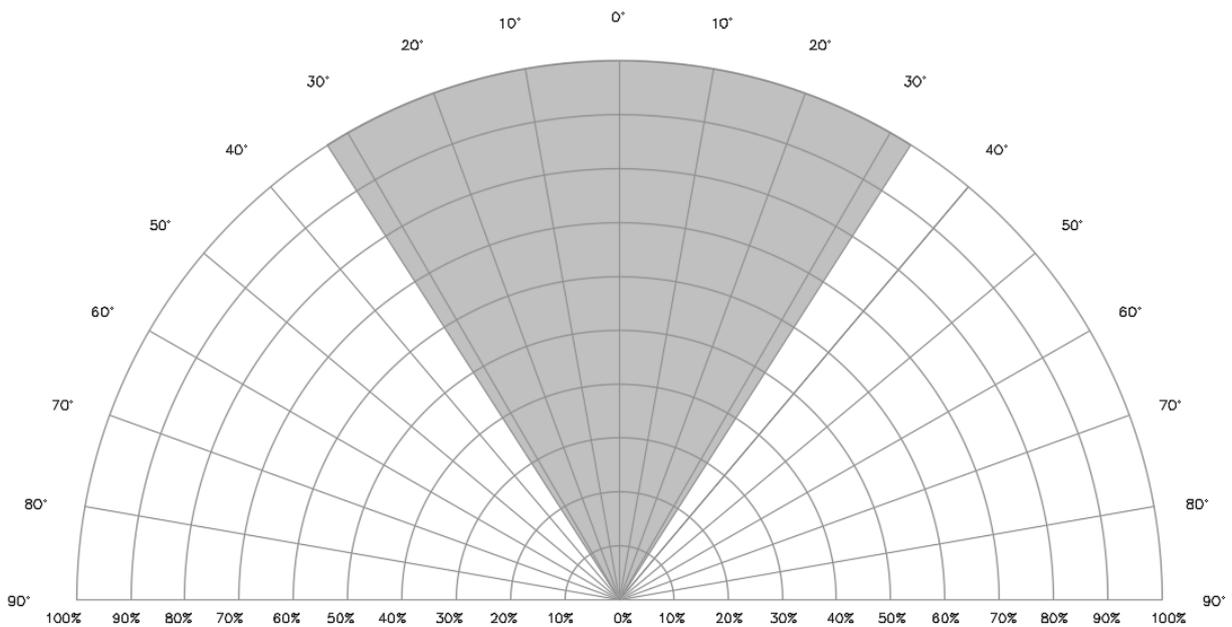

11 Appendix C - IEC 61508 Failure Rate Data

Certified SIL 2 Capable - IEC 61508: ed 2, 2010



Using reliability data extracted from the exida Electrical and Mechanical Component Reliability Handbook the following failure rates resulted from the VSF301 FMEDA.

The useful lifetime of critical components is predicted to be 50 years (Ref: Report No.: MP 08/02-03 R004 V1 R2 or later).

Failure Category	Failure Rate (FIT)
Fail Safe Undetected	10
Fail Dangerous Detected	638
Fail Detected (detected by internal diagnostics)	547.4
Fail High (detected by logic solver)	19.6
Fail low (detected by logic solver)	71.0
Fail Dangerous Undetected	76.0
Residual Effect	114.9
Annunciation Undetected	21.1

The VSF301 is a Type B Element. Therefore, based on the SFF of 90% a design can meet SIL 2 @ HFT=0 when the VSF301 is used as the only component in a SIF Sub-assembly.

Proof Testing

Step	Action
1	Bypass the safety function and take appropriate action to avoid false trip.
2	(Optional) Use RS485 communications to retrieve diagnostics and take appropriate action.
3	Use the test torch to force the VSF301 into alarm state. Verify that LED, alarm relay/0-20mA outputs indicate alarm (as required)
4	Wait for detector alarm signal to unlatch. Verify that the LED, alarm relay/0-20mA outputs no longer indicate alarm.
5	Inspect enclosure for any leaks, visible damage, or dirty optics.
6	Perform the periodic inspection and maintenance procedure from the VSF301 safety and technical manual.
7	Remove the bypass and otherwise restore normal operation.

Personnel carrying out commissioning, testing and maintenance on this device shall be sufficiently competent and experienced to do so.



Viking Corporation
5150 Beltway Dr. SE
Caledonia MI 49316

Form No. F_020521 Rev 2

Ref: 3303.001 Rev: 2.1 ECN:4587